


# bar@drinkstuff

## WINE COOLER

### CW-65D INSTRUCTION MANUAL

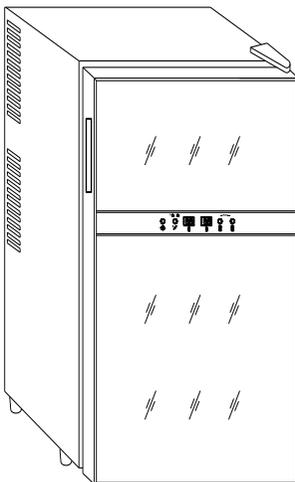


PLEASE READ AND FOLLOW ALL INSTRUCTIONS CAREFULLY BEFORE USE.

- FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN BODILY INJURY, AND/OR PROPERTY LOSS.
- RETAIN INSTRUCTION MANUAL FOR FUTURE USE.


# ***Index***

I. STRUCTURE .....	2
II. TECHNICAL DATA .....	2
III. GENERAL SAFETY PRECAUTIONS.....	3
IV. OPERATION OF REFRIGERATOR.....	4
V. PARTICULAR PRECAUTIONS.....	5
VI. MAINTENANCE.....	5
VII. TROUBLESHOOTING.....	6
VIII. ELECTRIC PRINCIPLE DIAGRAM.....	7
IX. DISPOSAL.....	7
X. GUARANTEE.....	7

# I. STRUCTURE

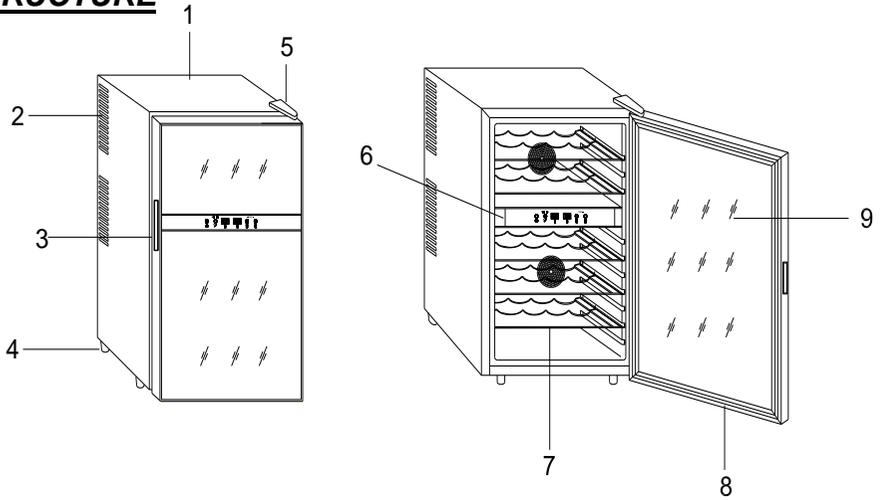

## Control panel view to enlarge

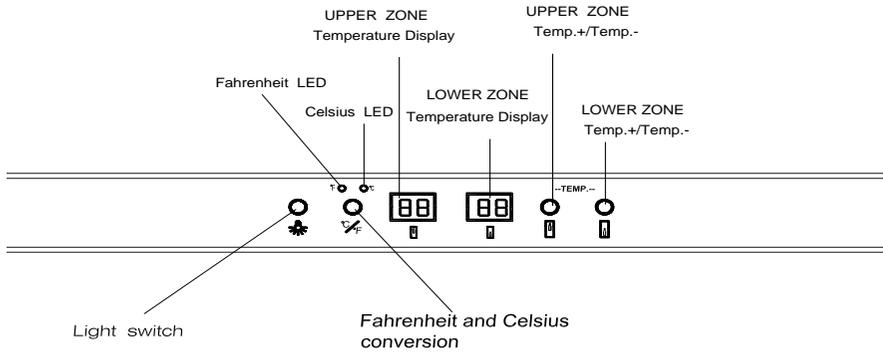

- 1.Cabinet 2.Vent hole 3.Handle 4.Adjustable leg 5.Cover  
6.Control panel 7.Rack 8.Door gasket 9.Glass door

# II. TECHNICAL DATA

Model	Capacity	Rating power	Rating Voltage	Frequency	Cooling Temp.	Product Size(mm)	Net weight
CW-65D	65L	130W 0.9A	220-240V	50 Hz	Upper : 7-12 °C(45°F -54°F) Lower :12-18°C(54°F -65°F)	450X525X730	22.87Kg

### **III. GENERAL SAFETY PRECAUTIONS**

- After removing the wine cooler from the package, make sure it is in good condition. In case of doubt, do not use it and contact an authorized service centre.
- This wine cooler must only be used as it is intended. The manufacturer will not compensate for any damage due to improper use or repairs made by unqualified personnel.
- Before cleaning the wine cooler, make sure it is unplugged. Never clean the unit with an acid preparation, medical, dilution, gasoline, oil or any other kind of chemical substance that could damage the refrigerator.
- Repair should only be made by authorized service centres.

#### **Caution :**

1. To reduce the risk of fire, replace only with same type fuse.
2. Free standing installation only.
3. Do not use extension cords.

#### **Warning:**



1. If the supply cord is damaged, it must be replaced by the manufacturer or service agent or similarly qualified person in order to avoid hazard.
2. Please screw off the door before disposing of the appliance.
3. Please keep the appliance away from any flammable substances.
4. To avoid a hazard due to the instability of the appliance, it must be fixed according to the instructions.
5. Do not use electrical appliances inside the food storage compartments of the appliance.
6. Children should be supervised to ensure that they do not play with the appliance.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
8. Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

#### **IV. OPERATION OF REFRIGERATOR**

- Clean the inside before use.
- For first time use (or if the appliance has not been used for a long period of time), you should adjust the temperature to minimum and have the cabinet empty running for 2 hours, and then put your wine in it and adjust the desired temperature.
- When the power is connected, cooling system starts to work. The TEMP-ADJ button is set on certain position, which means that if the temperature in the wine cooler reaches the point set, Self-control Temperature System stops cooling system so the temperature in the cabinet rises gradually.
- When the inside temperature rises above the set point, Cooling Self-control Temperature starts to work again, the cellar enter into cooling cycles.
- The upper zone temperature is adjusted in the range of 7°C—12°C in the cabinet , and the lower zone temperature is adjusted in the range of 12°C—18°C in the cabinet, when you want to change the temperature in the cabinet, You can push “Temp +” and “Temp -” to the temperature, press the setting key again to stop the flashing, the temperature will be set. The actual temperature inside the wine cellar will be displayed after 3 seconds of the setting around.
- You can push the “°C/°F” button to switch between Celsius and Fahrenheit or push the “Lamp” button to control the light inside.

#### **NOTE:**

After you setting the temperature, the LED display will return to show the temperature in the cooler, but it could turn to the point that you have set gradually.

## **V. PARTICULAR PRECAUTIONS**

- Please unplug the wine cellar before moving.
- If there is a long distance to move, please use a cart for delivery
- Please check if all the parts are ready before installation.
- In order to function at its potential, this wine cooler needs to be placed on flat floor, with 5cm spaces at each side and 10 cm at the backside.
- The height of the wine cooler is adjustable by adjusting the four legs, but cannot be over 20 mm of each.
- Keep ventilation holes clear, and keep at a distance of 50 mm from surroundings.
- Please keep away from the heat resources or gas.
- Avoid direct sunshine and high temperature.
- Do not place heavy articles on the top of the cellar.

## **VI. MAINTENANCE**

- Shut off power supply before cleaning cabinet.
- Take out wines and shelves, and then clean the cabinet with clean water.
- Do not use soap or detergent for the cabinet.
- Clean the cellar regularly.


## **VII. TROUBLESHOOTING**

<b>Symptoms</b>	<b>Possible cause</b>	<b>Solutions</b>
No cooling	<ul style="list-style-type: none"><li>• Plug not put in</li><li>• Low voltage</li><li>• Fuse broken</li></ul>	<ul style="list-style-type: none"><li>• Put in the plug</li><li>• Ensure normal voltage</li><li>• Change fuse</li></ul>
Not cold enough temperature inside	<ul style="list-style-type: none"><li>• The wine cooler is near heat source;</li><li>• Poor ventilation;</li><li>• Fans don't work;</li></ul>	<ul style="list-style-type: none"><li>• Keep the wine cooler away from sunshine or other heat source;</li><li>• Place the wine cooler on the place with good ventilation and Keep things away from the fans;</li><li>• Check whether the plug is connected or change the fan;</li></ul>
Moisture build on inter or exterior wine cooler	<ul style="list-style-type: none"><li>• High humidity</li><li>• Gap between cabinet and door gasket</li><li>• Prolonged or frequent door openings</li></ul>	<ul style="list-style-type: none"><li>• Please use a soft and dry cloth to clean the dew.</li><li>• Ensure door gaskets for proper seal.</li><li>• Reduce time and frequency when door is open</li></ul>

### **Dew on the glass surface**

If the weather is wet or in rainy days, there may be some dew on the wine cellar surface. It is a normal case and adjusting the temperature of the wine cellar to reduce the dew. The higher temperature inside the wine cellar results in less dew on the glass door. Please use a soft dry cloth to clean the dew.

## VIII . ELECTRIC PRINCIPLE DIAGRAM

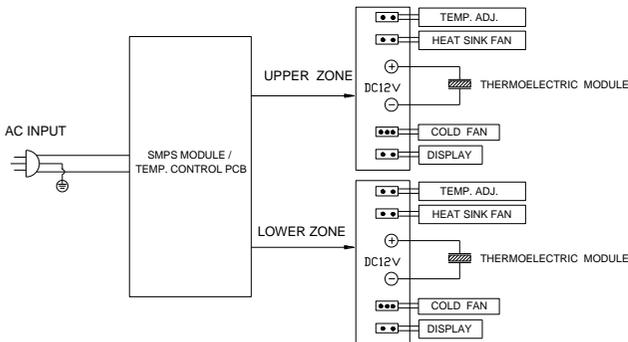

## IX . DISPOSAL:

Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.



- It is prohibited to dispose of this appliance in domestic household waste.
- For disposal there are several possibilities:
  - a) The municipality has established collection systems, where electronic waste can be disposed of at least free of charge to the user.
  - b) The disposal of your old appliance must follow the legal guide lines of the country where the appliance has been disposed.
  - c) As old product contains valuable resources, they can be sold to scrap metal dealers.
- Disposal of waste in forests and landscapes endangers your health when hazardous substances leak into the ground-water and find their way into the food chain.

## X . Guarantee:

- The guarantee of the wine cooler is regulated by the representative distribution organization, in the country where the appliance has been purchased. The supplier where you bought the appliance can give additional information.

- You need the original purchase receipt and the date of purchase at any case, to be able to use your guarantee.